 



5

To Set the Decimal Point Position:


1. If it's not already shown, press MENU until the unit displays:

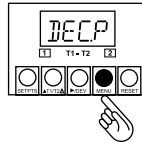

 
2. Press ► /DEV. The meter displays:

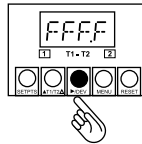

 3. Press ▲ / T1/T2/ △ to move the decimal point to the desired location. The choices are FFFF. and FFF.F.

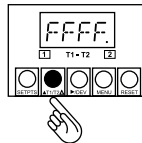


 4. Press MENU to select the decimal point position shown. The meter displays:

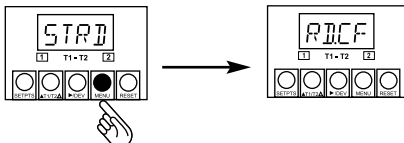


To Set the Temperature Unit (Fahrenheit or Celsius):

 
1. If it's not already shown, press MENU until the meter displays:

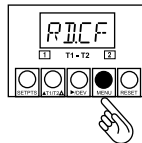

 
2. Press ► /DEV. The meter displays:

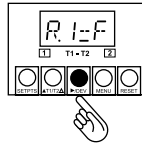

 3. Press ▲ /T1/T2/ △ to display the setting you want. Choices are F and C.

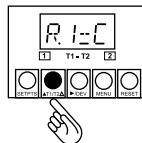

 
4. Press MENU to select the temperature until shown. The meter displays:

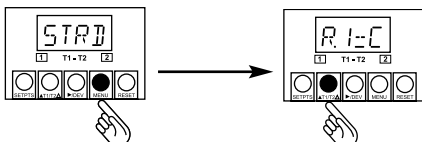

6

Begin Operation

 Exit the Configuration Menu and reinitialize the meter.

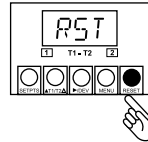

- Press RESET twice, or
- Press MENU until RST flashes on the display.

 
When the temperature appears, the meter is up and running.

To View the Temperature Differentials:

While in RUN mode, press ▲ / T1/T2/ △ to display:

- T1: Temperature 1
- T2: Temperature 2
- T1-T2: Differential between T1 and T2.

WARNING: These products are not designed for use in, and should not be used for, patient connected applications.



It is the policy of NEWPORT to comply with all worldwide safety and EMC/EMI regulations that apply. NEWPORT is constantly pursuing certification of its products to the European New Approach Directives. NEWPORT will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct but NEWPORT Electronics, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

TRADEMARK NOTICE:



Warranty/Disclaimer

NEWPORT Electronics, Inc. warrants this unit to be free of defects in materials and workmanship for a period of **one (1) year** from the date of purchase. In addition to NEWPORT's standard warranty period, NEWPORT Electronics will extend the warranty period for **one (1) additional year** if the warranty card enclosed with each instrument is returned to NEWPORT.

If the unit should malfunction, it must be returned to the factory for evaluation. NEWPORT's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by NEWPORT, if the unit is found to be defective it will be repaired or replaced at no charge. NEWPORT's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of NEWPORT's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

NEWPORT is pleased to offer suggestions on the use of its various products. However, NEWPORT neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by NEWPORT, either verbal or written. NEWPORT warrants only that the parts manufactured by it will be as specified and free of defects. NEWPORT MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive and the total liability of NEWPORT with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall NEWPORT be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by NEWPORT is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, or used on humans, or misused in any way, NEWPORT assumes no responsibility as set forth in our basic WARRANTY / DISCLAIMER language, and additionally purchaser will indemnify NEWPORT and hold NEWPORT harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

Return Requests/Inquiries

Direct all warranty and repair requests/inquiries to the NEWPORT Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO NEWPORT, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM NEWPORT'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting NEWPORT:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult NEWPORT for current repair charges. Have the following information available BEFORE contacting NEWPORT:

1. P.O. number to cover the COST of the repair,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

NEWPORT's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

NEWPORT is a registered trademark of NEWPORT Electronics, Inc.

© Copyright 2004 NEWPORT Electronics, Inc. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of NEWPORT Electronics, Inc.

PATENT NOTICE: The "Meter Case Bezel Design" is a trademark of NEWPORT Electronics, Inc., registered in the U.S.. This product is covered by one or more of the following patents: U.S. Pat. No. Des. 336,895; 5,274,577 / CANADA 2052599; 2052600 / ITALY 1249456; 1250938 / FRANCE BREVET No. 91 12756 / SPAIN 2039150; 2048066 / UK PATENT No. GB2 249 837; GB2 248 954 / GERMANY DE 41 34398 C2. OTHER INTERNATIONAL PATENTS PENDING.



INFCDT
Differential Temperature Meter
with Thermocouple

For immediate technical or application assistance please call:

1-800-6397678
1-800-NEWPORT

Newport Electronics, Inc.
2229 South Yale Street • Santa Ana, CA • 92704 • U.S.A.
TEL: (714) 540-4914 • FAX: (203) 968-7311
Toll Free: 1-800-639-7678 • www.newportUS.com • e-mail: info@newportUS.com
ISO 9001 Certified

Newport Technologies, Inc.
976 Bergar • Laval (Quebec) • H7L 5A1 • Canada
TEL: (514) 335-3183 • FAX: (514) 856-6886
Toll Free: 1-800-639-7678 • www.newport.ca • e-mail: info@newport.ca

Newport Electronics, Ltd.
One Omega Drive • River Bend Technology Centre
Northbank, Ilam • Manchester M44 5BD • United Kingdom
Tel: +44 161 777 6611 • FAX: +44 161 777 6622
Toll Free: 0800 488 488 • www.newportuk.co.uk • e-mail: sales@newportuk.co.uk

Newport Electronics B.V.
Postbus 8034 • 1180 LA Amstelveen • The Netherlands
TEL: +31 20 3472121 • FAX: +31 20 6434643
Toll Free: 0800 0993344 • www.newport.nl • e-mail: info@newport.nl

Newport Electronics spol s.r.o.
Fryštatska 184, 733 01 Karviná • Czech Republic
TEL: +420 59 6311899 • FAX: +420 59 6311114
Toll Free: 0800-1-66342 • www.newport.cz • e-mail: info@newport.cz

Newport Electronics GmbH
Daimlerstrasse 26 • D-75392 Deckenpfronn • Germany
TEL: 49 7056 9398-0 • FAX: 49 7056 9398-29
Toll Free: 0800 / 6397678 • www.newport.de • e-mail: sales@newport.de

Newport Electronique S.A.R.L.
11, rue Jacques Cartier • 78280 Guyancourt • France
TEL: +33 1 61 37 29 00 • FAX: +33 1 30 57 54 27
Toll Free: 0800 466 342 • www.newport.fr • e-mail: sales@newport.fr

Mexico and Latin America
FAX: 001 (203) 359-7807
En Español: 001 (203) 359-7803

NEWPORTnet™ On-Line Service
www.newportUS.com

Internet e-mail
info@newportUS.com



Using This Quick Start Manual

Use this Quick Start Manual to set up your Meter and begin operation. Information is provided on how to:

- Connect ac power
- Connect the thermocouple
- Set basic options for operation

For complete information on all setup options, please refer to the Operator's Manual.

 
Before You Begin

In addition to the meter and the related parts, you will need the following items to set up your unit:

- ac power, as listed on the units ID/Product Label
- Two thermocouples
- 1/8-inch flat-blade screwdriver.

Mount the Unit


1. Cut a panel opening using the dimensions shown to the right.
2. Position the unit in the opening, making sure the front bezel gasket is flush to the panel.
3. Slide on mounting bracket to secure.

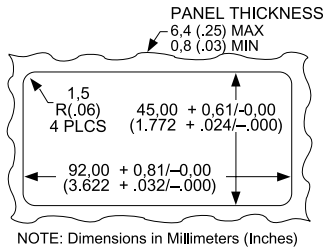

Warning: Do not connect ac power to your meter until you have completed all input and output connections. Failure to do so may result in injury!

Connect AC Power

 
1. Remove the panel at the back of the unit.
2. Locate the TB1 connector.
3. Insert the correct wire in each terminal as shown in the following figure and tighten the lockdown screws.
4. Tug gently on the wires to verify the connections.

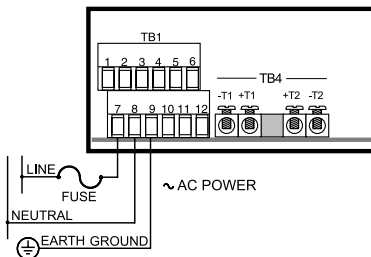

Main AC Power Connections

Connect the Thermocouple

 1. Locate the TB4 connectors on the rear of the unit. Refer to previous figure.
2. Attach the thermocouple wires.
 - Connect positive (+) lead of thermocouple.
 - Connect negative (-) red lead of thermocouple.
3. Tighten the lockdown screws. The following figure shows the correct wiring.
4. Tug gently on the wires to verify the connections.
5. Replace the panel at the back of the unit.

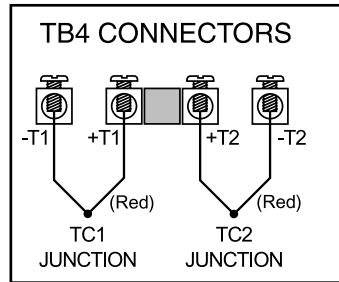

Dual Thermocouple Input Connection

Turn On the Unit

1. Apply ac power to the unit.

The unit initializes, flashing the following messages on the front panel: RST, D.T/C, INIT. Then the temperature should display.
2. Verify that a temperature is displayed. If not:
 - Remove ac power
 - Verify the TB1 power connections
 - Check your power source
 - Apply ac power again.


Configure the Unit

To configure the unit, you use the buttons on the front panel.


To:	Take This Action:
Display the Configuration Menu	Press the MENU button. The first on the menu, INPT, displays.
Select a submenu (a function you want to perform)	<ol style="list-style-type: none"> 1. Press MENU until the function you want is shown. 2. Press ▶ /DEV. <p>The information you can change begins to flash.</p>
Select a value for that submenu function	<ol style="list-style-type: none"> 1. Press ▲ /T1/T2 /△ to display the option you want. 2. Press MENU to select it. <p>The message STRD quickly flashes, indicating that the selection has been stored in memory. Then the next menu function displays.</p>
Go back to the previous menu function	Press RESET once.
Exit the Configuration Menu	Press RESET twice. The meter reinitializes (displays RST, D.T/C, INIT). When the temperature displays, the meter is in run mode. (Optionally, you can press MENU to move through all the menu functions until the unit reinitializes.)

To Set the Thermocouple Type:

 
1. Press MENU until the meter displays:

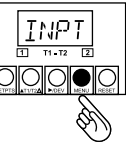

 2. Press ▶ /DEV. The meter displays:

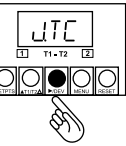

 3. Press ▲ /T1/T2 /△ until the thermocouple for your installation is shown.

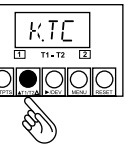

Choices are J.TC, K.TC, T.TC, DJ.TC

4. Press MENU to select the thermocouple shown. The meter displays:

