

These changes are the result of the following product enhancement:

New case mounting design.

This addendum applies to Part 2 Hardware in your iServer Operator's Manual.



HARDWARE

2.1 Mounting

2.1.1 Mounting the Wall Mount iServer

Position unit where required. Mark and drill the two #6 screw holes.

After bracket is mounted on the wall, align back of unit over the three bracket clips, once engaged, slide downward, the unit will snap in place.

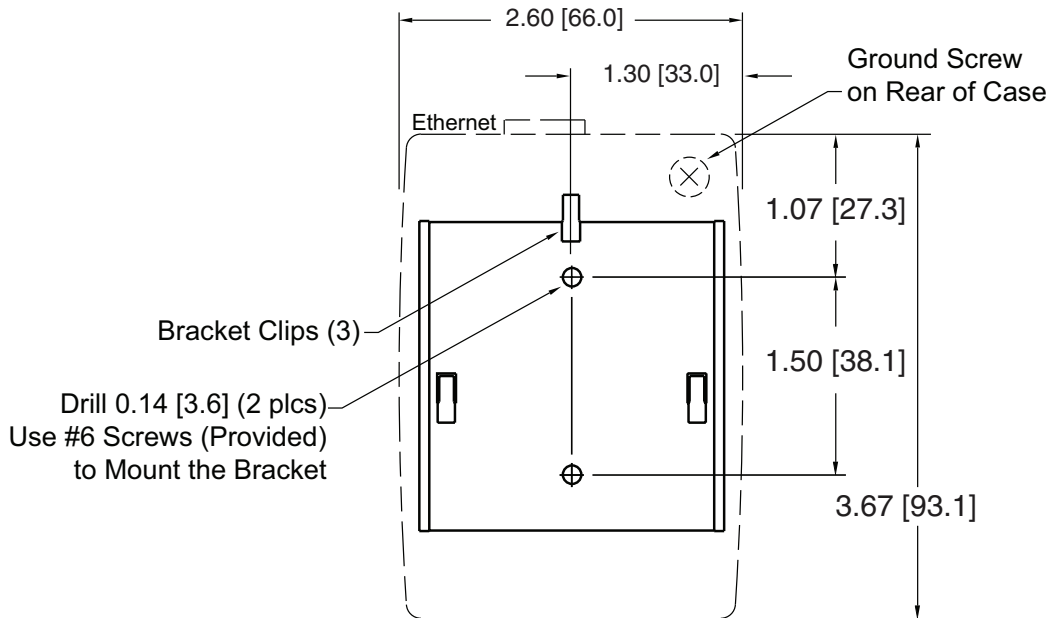


Figure 2.1 Mounting - Wall Mount iServer

Note

It is recommended that you ground your unit. With one end of a wire connected to earth ground, the other side can be wrapped around the ground screw, located on the bottom of the case.

Note

If unit is to be mounted on a flat surface, you may take the bottom rubber feet off the unit.

SPECIFICATIONS

5.1 Dimensions

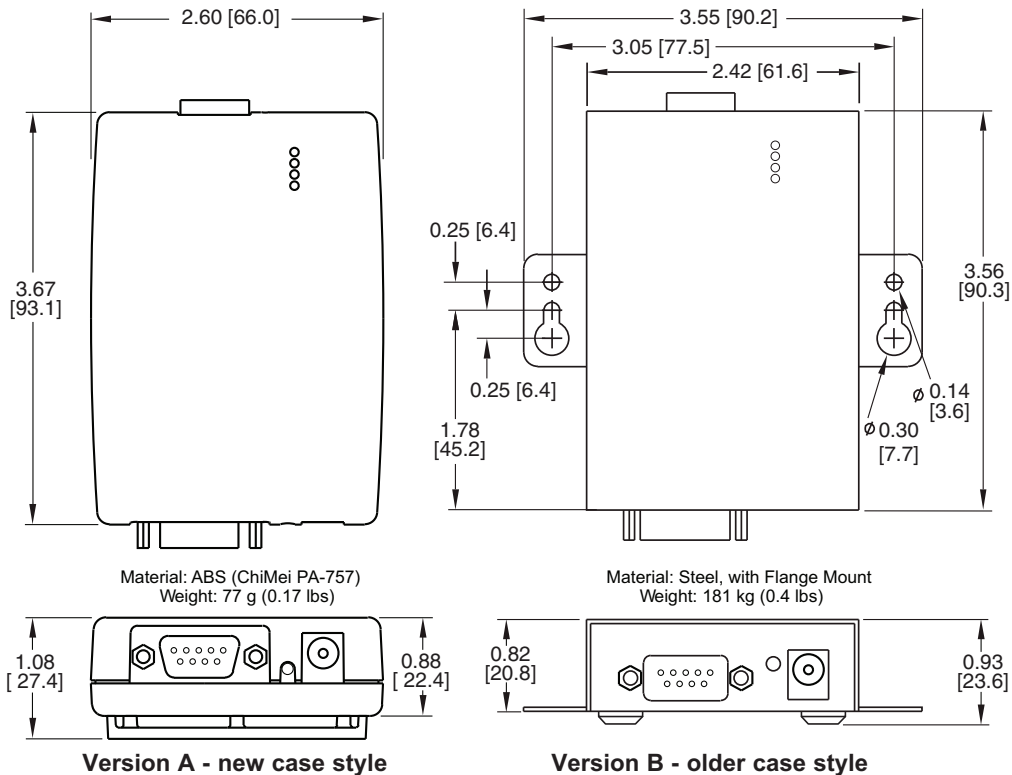


Figure 5.1 Wall Mount iServer Dimensions